



Video King®

Home of the Champs!

SUPERCHAMP™ HANDSETS PLAYER INSTRUCTIONS

Entering Numbers

- Enter every called bingo number on the red number pad, then press the **ENTER** button.

Removing A Bingo Number

- If you have **NOT** pressed the **ENTER** button yet, press the **CLEAR ENTRY** button to clear the number from the top right corner of the screen.
- If you have already pressed the **ENTER** button, enter the number again and press **ENTER** again. When asked if you want to remove this call, press the arrow button under **YES**.

Advancing To The Next Game

- After a game is over, press the red **NEXT GAME** button, and then press the arrow button under **YES** to move to the next game.
- If you need to advance more than one game, ask a floor worker for assistance.

Verifying That All Of Your Cards Are In The Handset

- Press the **INFO** button to view game information and the number of cards you purchased.
- Press the arrow button under **GAME INFO** for information on the selected game.
- Press the **INFO** button to return to the game.

Viewing All Of Your Cards

- Press the **NEXT CARD** button to view and scroll through all your cards.

Viewing All The Numbers You Entered

- Press the **FLASHBOARD** button once to see the flashboard and again to return to the game.

Backing Up One Game

- Press the **INFO** button, and then press the arrow button under **BACKUP 1 GAME**. When asked if you want to end this game and go back one game, press the arrow button under **YES**.
- Press the arrow button under **YES** to keep all bingo numbers previously entered, or press the arrow button under **NO** to erase all the bingo numbers you entered.
- If you need to go back more than one game, ask a floor worker for assistance.

Changing Your Handset Options

- Press the **MENU** button, and then press the arrow button under **OPTION**.
- Select from the choices below:
 - ZOOM IN/OUT** — View one, two, four, six, nine or twelve cards at once.
 - DAUBER SHAPE** — Select a dauber shape number (0-9).
 - DAUBER COLOR** — Select a dauber color number (0-9).
 - SHOW BEST** — Select **YES/NO** to automatically show your best cards.
 - SCREEN COLOR** — Select black or white as the background color.
- Press **MENU** to return to the game.

**A Howling
Good Time!**

